



OPERATING GUIDE


Step 1





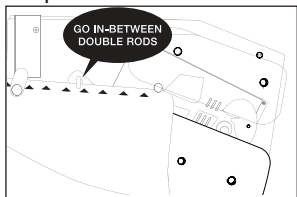

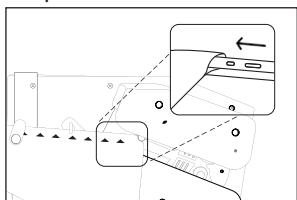


Film Loading Instructions:

1. Load film onto film roller with arrows facing towards the machine. Film will go under film align rod and in-between double rods.
2. On the side of the film that is closest to the machine, create a small opening and thread film through the feeding tube up to the belts.
3. On the machine press the  button and assist pulling the film to the front of the machine. This will ensure that the film is fed properly when the machine begins to produce pillows.


Step 2









Start Generating Pillows:

- To select the amount of air press  and choose  or  bottom to adjust the air pressure.
- On the control panel 8 groups of parameters can be pre-set. Press bottom  or  for 3 seconds to change setting and then the  bottom to lock the setting.
- Press the  button to start generating pillows.

Operating Modes:







Start/Stop Mode - Allows the user to continuously generate pillows until the  button is pressed. This will be the **default mode** when the machine is first turned on..

Timer Mode - Allows the user to set a timer on how long the machine will generate pillows.

To select **Timer Mode** quickly press & hold the  then  arrow. Select **Timer mode** by pressing the  button. Adjust the time by using the  and . To finalize the selection hit the  button.

For safety instruction, see User manual

Control Panel Legend

No.	Name	Remark
1	Increase button	
2	Decrease button	
3	Trans-film button	
4	Stop Button	
5	Air Volume Set Button	
6	Start Button	
7	Temperature Set Button	