 
OPERATING GUIDE





Step 2



Film Loading Instructions:

1. Load film onto film roller with arrows facing towards the machine. Film will go under flm align rod and in-between double rods.

2. On the side of the film that is closest to the machine, create a small opening and thread flm through the feeding tube up to the belts.

3. On the machine press the p_{0} button and assist pulling the film to the front of the machine. This will ensure that the film is fed properly when the machine begins to produce pillows.

Start Generating Pillows:

• To select the pillow size, quickly press & hold the I & button then I button.

• The screen will display a list of pillow sizes. Select your corresponding pillow size by pressing the L O outton or E V button then press the L I button to select the pillow size.

Press the D button to begin generating pillows.

Operating Modes:

Start/Stop Mode - Allows the user to continuously generate pillows until the S button is pressed. This will be the **default mode** when the machine is first turned on.

Timer Mode - Allows the user to set a timer on how long the machine will generate pillows.

To select **Timer Mode** quickly press & hold the select **Timer mode** by pressing the selection hit the button.

Sensor Mode - As an optional accessory the sensor can be attached to our basket. The sensor will sense when the basket is full and start the machine when the basket is not. The machine will change over to **Sensor Mode** when the sensor is plugged in.

For safety instruction, see User manual

		Neme	Remark
	No.	Name	Remark
	1	Increase button	0
	2	Decrease button	0
	3	Trans-film button	<u>"</u> ≥~;
	4	Stop Button	
	5	Air Volume Set Button	*
	6	Start Button	0
	7	Temperature Set Button	ſ

Control Panel Legend